
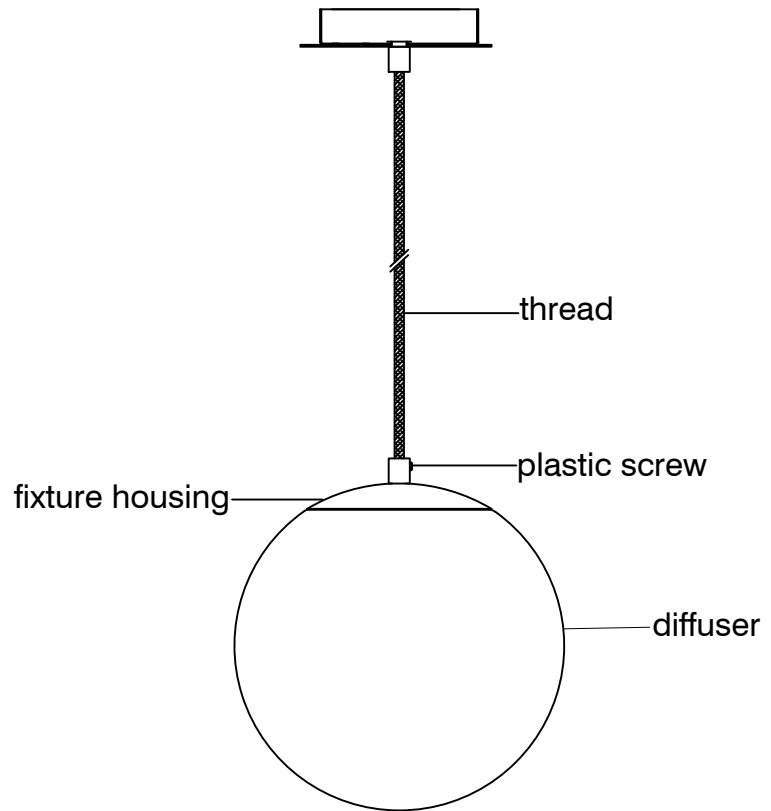


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

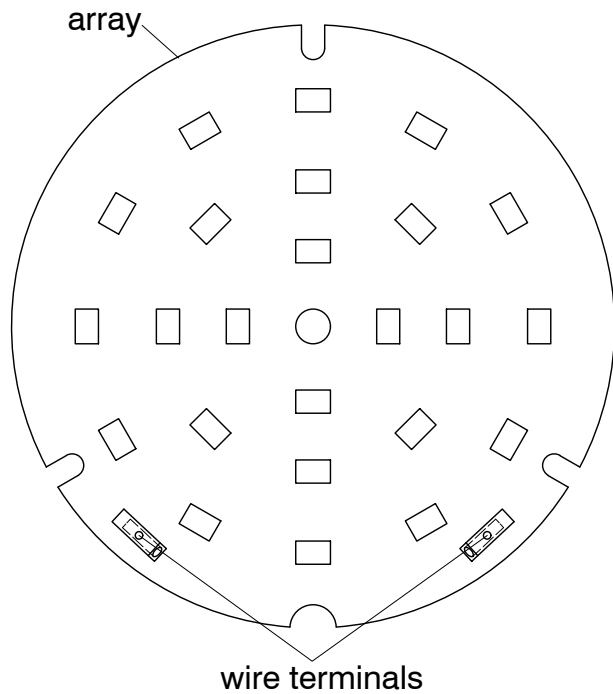

Installation Steps

1. Turn off power at breaker.
2. Carefully remove the diffuser by unscrewing it from the fixture housing. Set diffuser aside.
3. Loosen the plastic screw to be able to get better access to the array and array stand.
4. With the plastic screw loosened, pull fixture housing upward to achieve more slack.
5. Remove the array from the array stand by removing the mounting screws.
6. Pull wires out of terminals. With one hand, keep pressure on the wire terminals to keep from breaking them off. With the other hand, use pliers to pull the wire straight out from the terminal. Twisting the wire slightly while pulling may help it come loose. Do not cut wire, as the ends of the wires are soldered in order to allow it to stab into the terminals properly.
7. With your new array, carefully push the wires back into the proper terminals, while keeping pressure on the terminal so that it does not break off due to the force of pushing the wire. The Red wire must be inserted into the Positive (+) terminal, and the Blue wire must be inserted into the Negative (-) terminal.
8. Mount the new array onto the array stand using the mounting screws. When mounting the array be sure to check the wires are clear and not being pinched. Pinched wires may lead to a shortage and result in the array not lighting up.
9. Double check the wiring, and replace the diffuser with the fixture housing.
10. Tighten the plastic screw once you have completed replacing the diffuser to secure it.

**LUNA pendant
3-672-xx**

OXYGEN LIGHTING ©

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS